



# TWIN COLUMN TABLE THE LÜFTEN

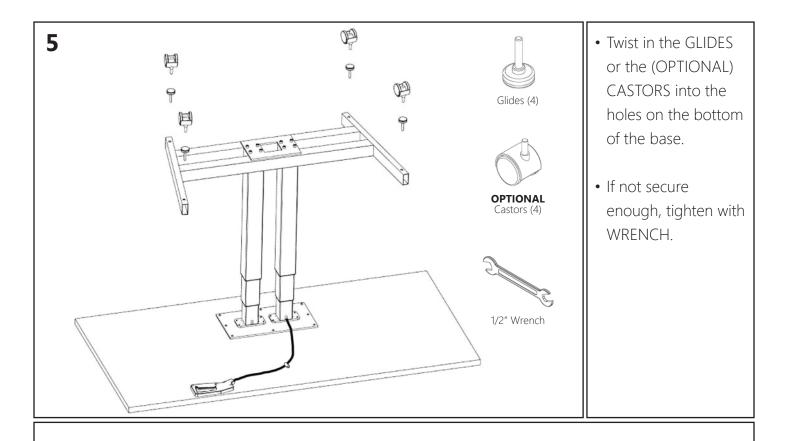

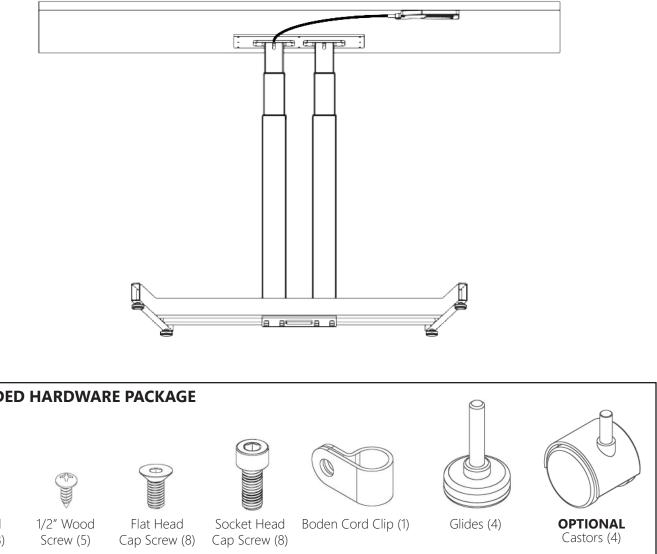





### **OPERATING INSTRUCTIONS**

To adjust the height of the table, squeeze the release handle and allow table to move up or push down on table top to lower. To cause more or less tension when lifting and lowering the table, use a wrench to tighten or loosen the ADJUSTMENT BARREL attached to the end of the handle.

CAUTION: Brace the top with free hand when moving the table up and down to control movement.

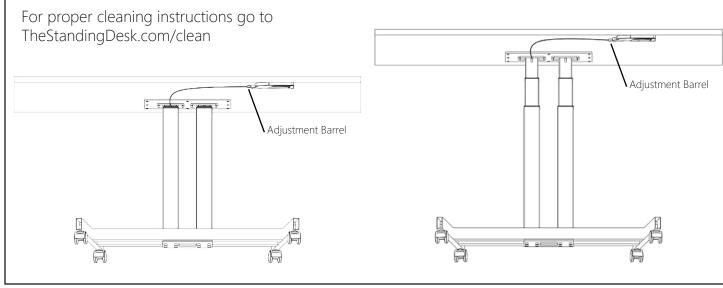



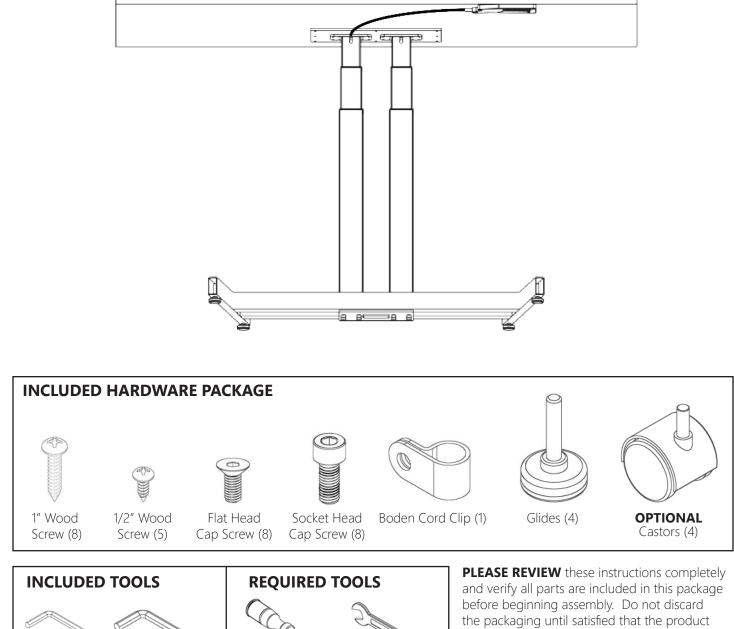



"Note" Ideal weight capacity range for the Luften desk is 15-35lbs with a standard 350N spring. The table support is solely intended to serve the purpose of ergonomic adjustments for your desk in accordance with the weights and measurements given in these instructions. Any usage other than that mentioned in this document is inappropriate; the manufacturer disclaims liability for any resulting damages. In such cases the user bears the full risk. The manufacturer cannot be held responsible for any losses or damages resulting from unauthorized modifications of this desk.

### TWIN COLUMN TABLE **THE LÜFTEN**





operates properly. Assembly and operation of this desk must be in accordance with these assembly instructions to avoid the risk of injury. Keep these Assembly and Operation Instructions near the assembly for reference.





## TWIN COLUMN TABLE **THE LÜFTEN**



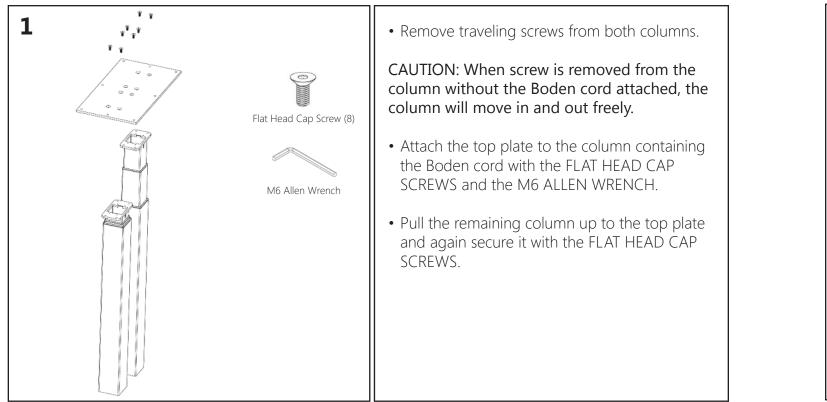

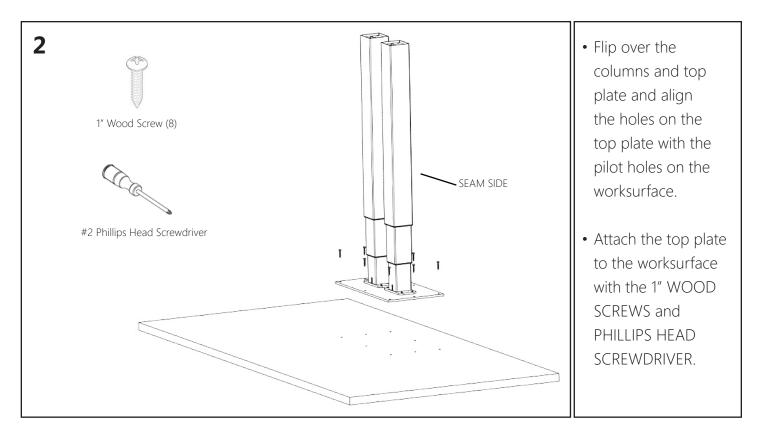

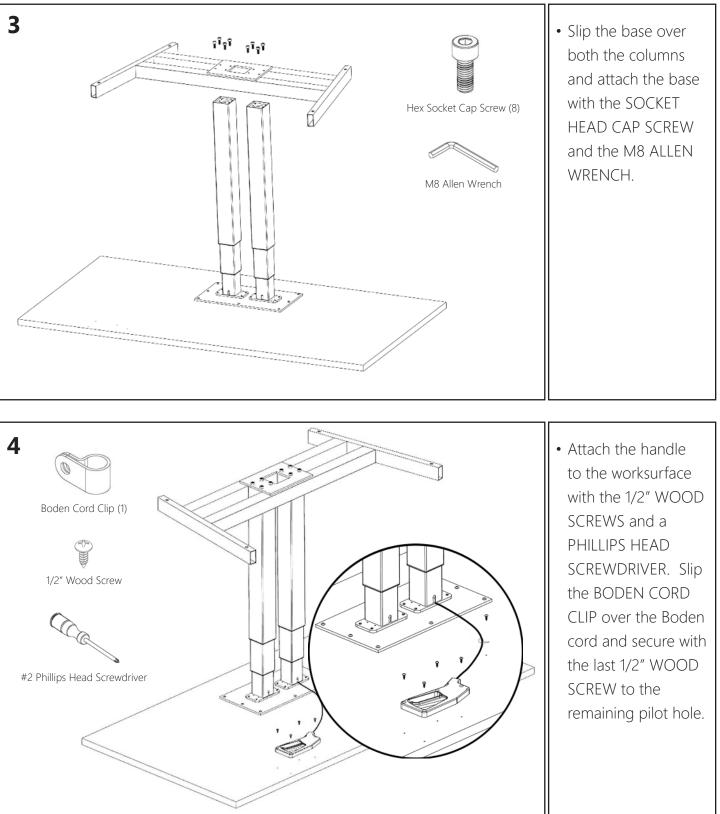

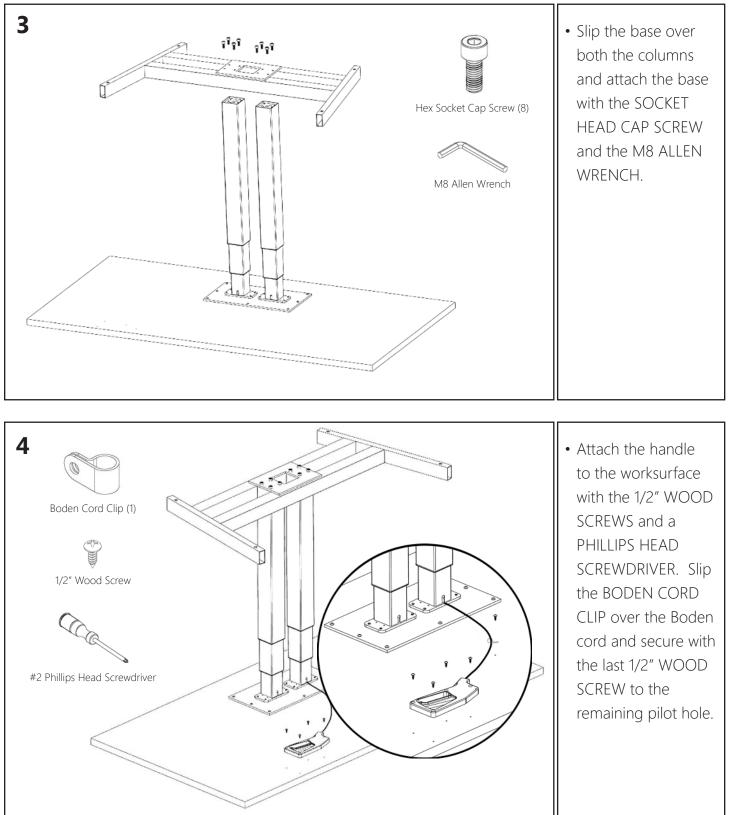

# TWIN COLUMN TABLE **THE LÜFTEN**